Britax

B-READY™

Accessories User Guide

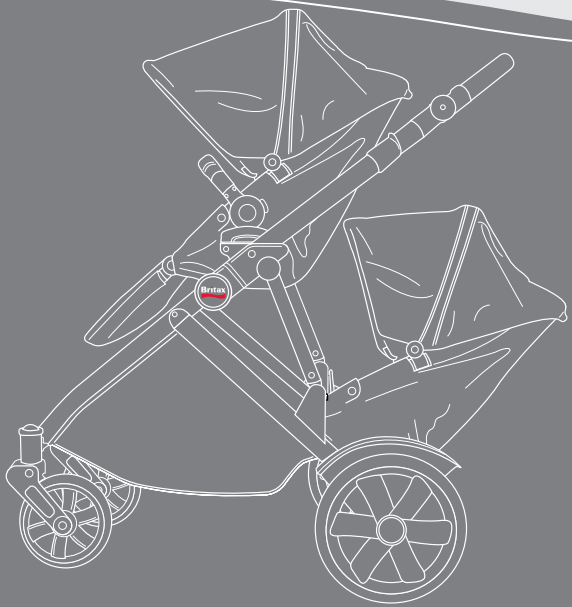

IMPORTANT: *To ensure your child is as safe as possible, read all instructions thoroughly before using these accessories. Store this manual for future reference.*

Table of Contents

Warnings 2
B-READY Second Seat 4
Features 5
Operating Instructions
Attaching the Second Seat 6
Removing the Second Seat 7
Second Seat Recline 7
Folding the Stroller with Second Seat 8
Second Seat with Infant Car Seat 9
Securing Your Child 10
Britax Bassinet 12
Features 11
Bassinet Assembly 14
Operating Instructions
Attaching the Bassinet 16
Removing the Bassinet 17
Folding with Bassinet 17
Carry Handle/Canopy 17
Bassinet with Second Seat 18
Britax Lower Infant Car Seat (LICS) Adapter 20
Features 21
Operating Instructions
Attaching the LICS Adapter 22
Attaching Infant Car Seat to LICS Adapter 23
Removing the LICS Adapter 23
Dual Infant Car Seats 24
Important Reminders 25
B-READY Stroller Configurations 26
Care and Maintenance 29
Warranty 30

©2010 Britax Child Safety, Inc. All rights reserved. Printed in USA P388100_R5:07.10
This product and its components are subject to change without notice.

WARNING!

DEATH or SERIOUS INJURY can occur:

General Warnings

- NEVER leave child unattended.
- Avoid serious injury from falling or sliding out. Always use harness to secure child.
- DO NOT use stroller for an infant younger than 6 months without an infant carrier or bassinet.
- DO NOT hang or place items on the stroller handle or frame. They may cause the stroller to become unstable.
- Children must always be restrained to prevent standing or falling out of stroller.
- DO NOT allow children to climb on or play with the stroller.
- Never use stroller on stairs or escalators.
- To avoid entrapment or pinching, DO NOT fold or unfold stroller when child is in or near stroller.
- Only use accessories and replacement parts approved by Britax Child Safety, Inc.
- Read and understand these instructions before using this product. To ensure proper use, store this user guide in a convenient place so it can be consulted often. Failure to follow all warnings and instructions could result in serious injury or death.
- Extension adapters are for use with an infant car seat or bassinet in the rear-facing position ONLY.
- When using an infant car seat with this product, refer to the product's user guide for maximum weights and other instructions.
- Do not exceed the manufacturer's maximum weight limit when using an infant car seat with this product.

Second Seat Warnings

- DO NOT use extension adapters with the top seat.
- Maximum weight for second seat is 35 lbs (15.9 kg).
- Never place heavy items in the underseat storage basket while a child is occupying the second seat.
- DO NOT allow child to climb into the second seat unassisted. Stroller could become unstable and tip.

Bassinet Warnings

SUFFOCATION HAZARD:

- Infants can suffocate between added padding or soft bedding and the side of the bassinet.
- NEVER add a mattress, pillow comforter or padding. Use ONLY the pad provided by BRITAX.
- Bassinet can roll over on soft surfaces and suffocate child. ONLY place bassinet on firm, stable surface.

To reduce the risk of SIDS, Pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your Physician.

FALL HAZARD:

- DO NOT use this product when the infant begins to push up on hands and knees or has reached manufacturer's recommended maximum weight of 20 lbs (9.1 kg).
- NEVER place bassinet near edges of counter tops, tables or other elevated surface. The infants movement can cause the bassinet to shift and move.
- DO NOT use the bassinet to transport an infant in a motor vehicle. This bassinet is NOT a child restraint.
- Use of bassinet cover is recommended for the added safety of your child.
- DO NOT overload the bassinet storage pouch. Maximum weight is 1 lb (0.45 kg).

Lower Infant Car Seat (LICS) Adapter Warnings

- Ensure that the LICS Adapter is secured before connecting an infant car seat.
- In dual infant car seat mode, the child in the lower infant car seat **MUST** be removed first to avoid tipping.
- To avoid tipping always remove child in lower seat first. Never use without primary seat installed and occupied.

Britax

B-READY™

2nd Seat

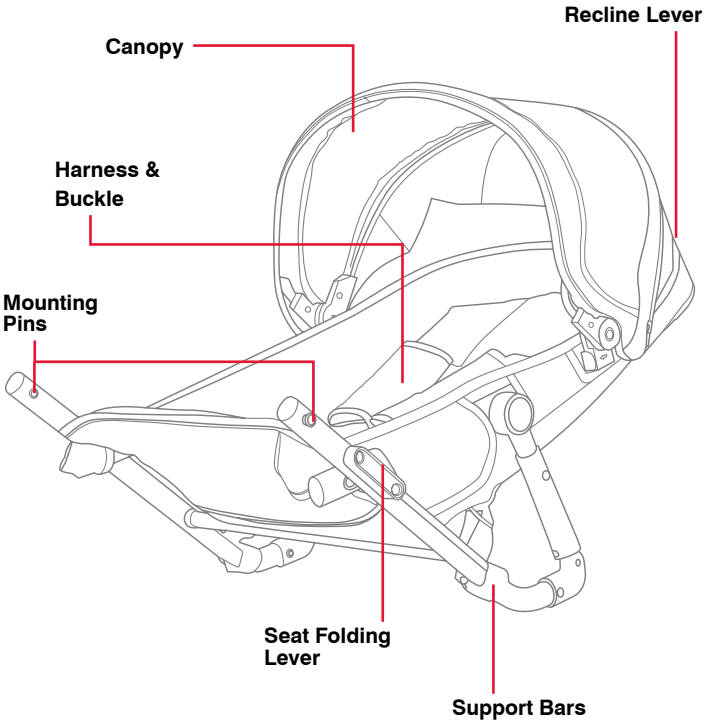

- Actual product may vary from images.

Attaching the Second Seat

NOTE: *Storage pouch must be removed before attaching second seat*

- Line up the support bars on the second seat with the mounting brackets on the inside of the frame

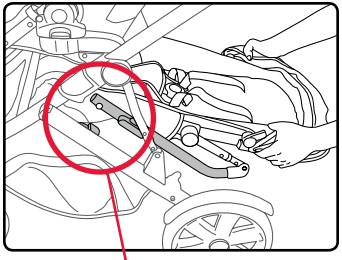

- Slide the mounting pins into mounting bracket on the stroller

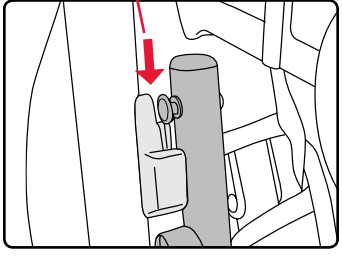

- Press down to until it is locked into place

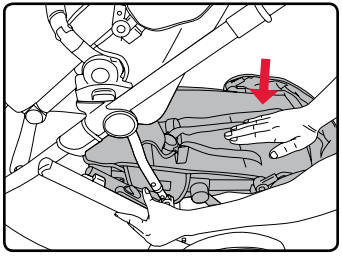

Removing the Second Seat

- Press the left button on the rear frame and then press and hold the right release button while lifting upward on the seat

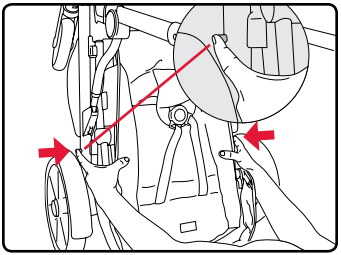

- Slide the mounting pins out of the mounting brackets and lift the second seat away from stroller

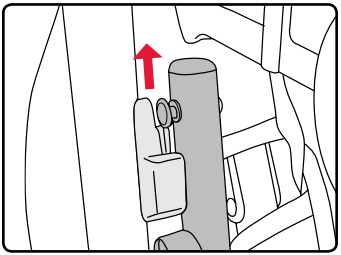

Second Seat Recline

- Lift the recline lever at the top of the seat and raise or lower the seat into one of the four recline positions

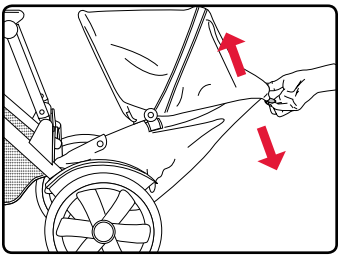

Folding Stroller with Second Seat

- Recline the second seat to its lowest position and fold back the canopy

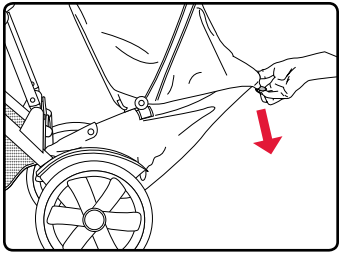

- Slide the seat folding lever and press the second seat down until it lies flat

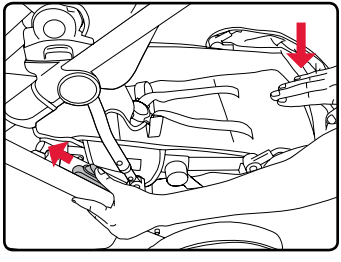

- Stroller can now be folded as described in the stroller user guide

NOTE: *You may need to compress the frame to engage the chassis lock*

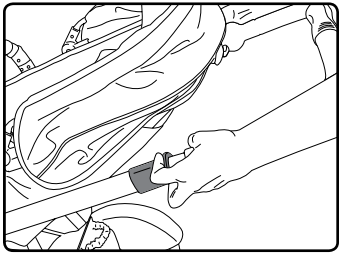

Second Seat with Infant Car Seat

- Attach the extension adapters to the frame by lining up the locking latches with the chassis sockets and pressing down until they lock into place

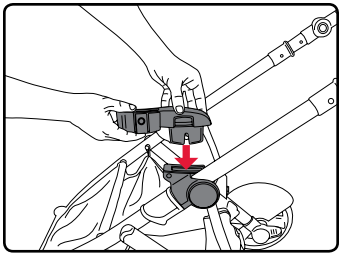

- Attach the fabric guard by connecting the zippers around each side of the frame and securing the elastic bands around the frame hinge bolt

IMPORTANT: *The fabric guard should always be used with an infant carrier on top to protect the child in the lower seat from possible finger entrapment*

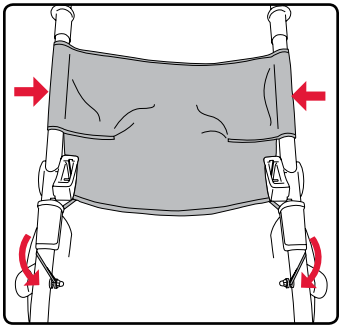

- Attach top infant car seat by lining up the locking latches with the adapter sockets and pressing down until they lock into place

NOTE: *Infant car seat can be either forward facing or rear facing*

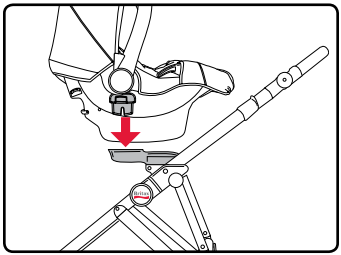

- Unlatch the harness by depressing the button in the center of the buckle while pulling the two tongues away from the buckle assembly

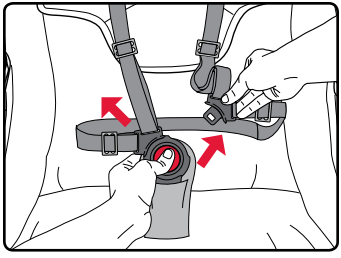

- To raise or lower the harness height, unthread the harness clips from the back of the seat

NOTE: *You may need to loosen the harness to adjust the harness height (See next page)*

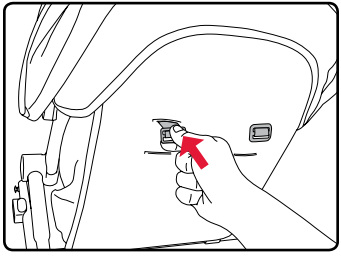

- Rethread the clips at the desired height

NOTE: *Harness height should be at or above the shoulders of the child*

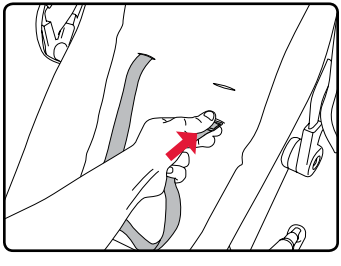

- Buckle the harness by inserting the tongues on the harness straps into the buckle assembly

NOTE: *Ensure the straps are not twisted as they may become uncomfortable for the child*

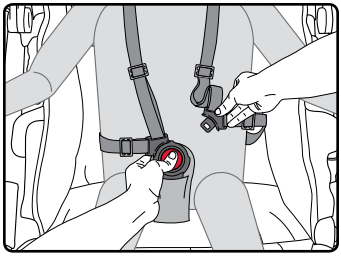

- Tighten or loosen the harness straps by sliding the harness adjusters up or down

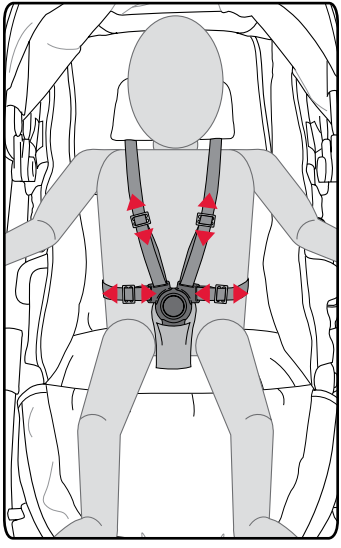

Buckle tongues separate for added safety. To reconnect buckle tongues, line up the two pieces and slide the upper portion onto the track on the lower piece

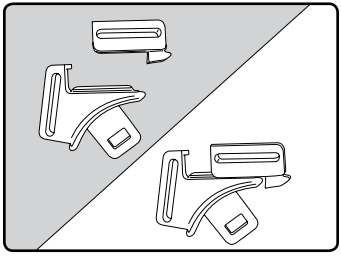

Britax

B-READY™

Bassinet

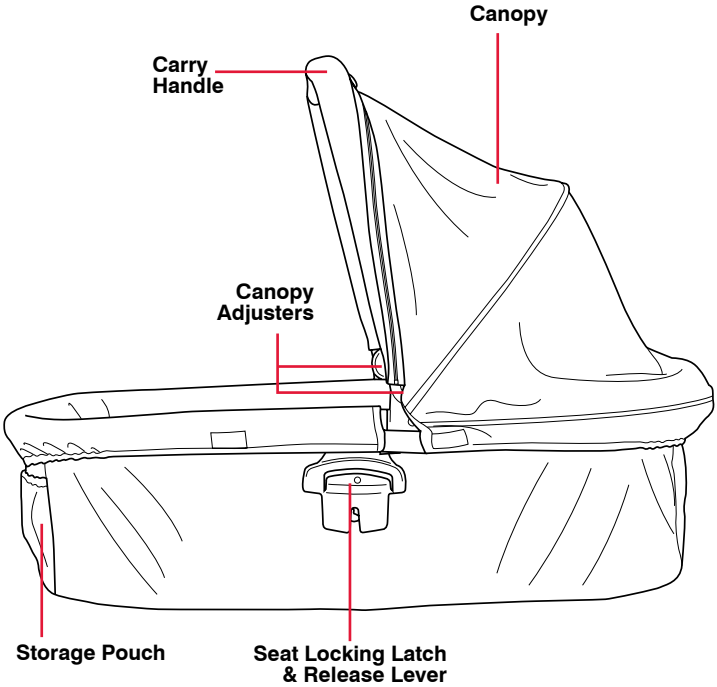

- Actual product may vary from images.

- Pull the frame supports outward by the tabs until they lock under all four clips

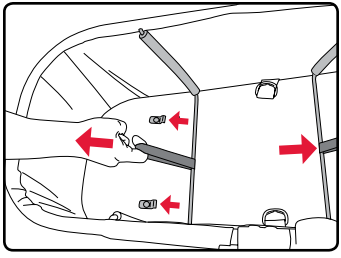

- Place the bassinet bedding into the bassinet and pull the elastic over the ends

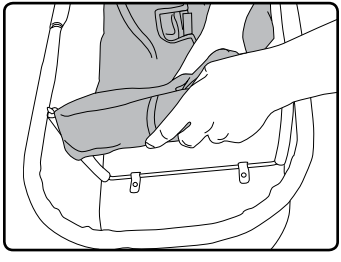

- Connect the hook and loop fasteners around the carry handle hinge

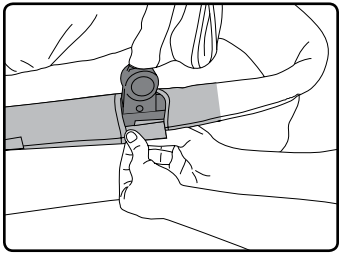

Boot Cover

- Lay the cover over the bassinet with the hook and loop fasteners face down

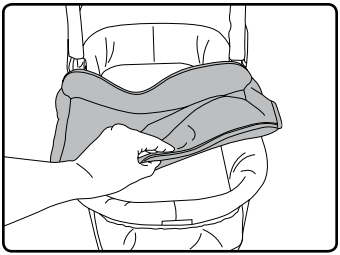

- Attach the five hook and loop fasteners

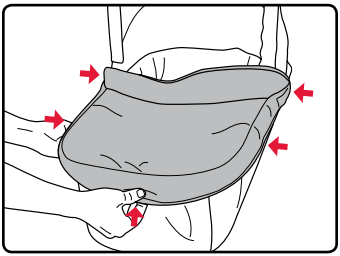

Attaching the Bassinet

- Line up the bassinet locking latches with the chassis sockets

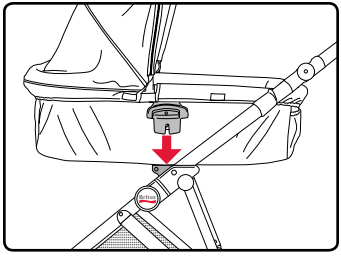

- Push down until the bassinet locks into place

NOTE: *Can be used forward facing with the use of the extension adapters (page 9)*

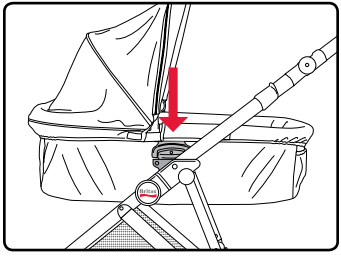

- Lift gently on the bassinet to ensure that it is secure

NOTE: *DO NOT pick up stroller with bassinet handle*

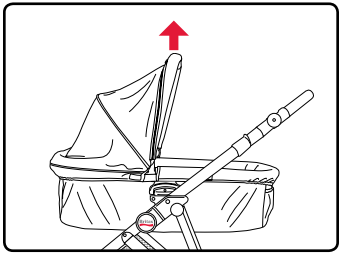

Removing the Bassinet

- Press the locking latch release buttons on both sides of the bassinet and lift upward

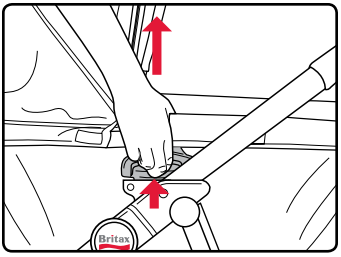

Folding with Bassinet

- The bassinet must be removed before folding stroller

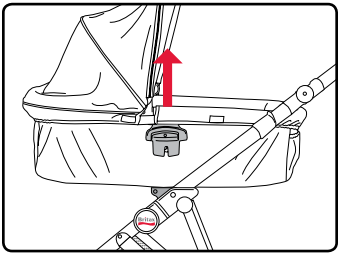

Carry Handle/Canopy

- Press the hinge buttons on both sides of the carry handle and rotate the handle up or down to the desired position

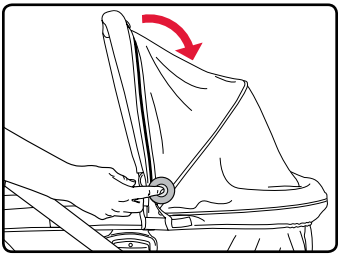

Bassinet with Second Seat

- Attach the bassinet using the extension adapters by lining up the bassinet locking latches with the extension adapter sockets and pressing down until the bassinet locks into place

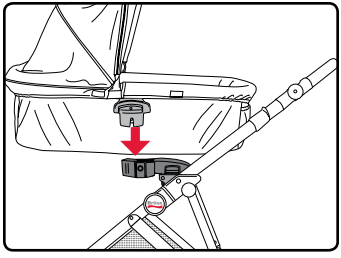

- Attach second seat (Page 6)

IMPORTANT: *Extension adapters MUST be used when using the bassinet with the second seat*

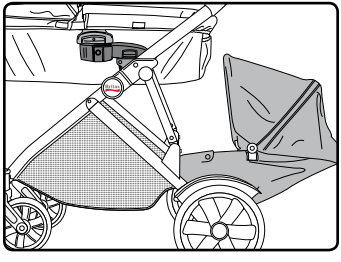

TIP: *For extra room for the child in the lower seat, the seat can be placed in a reclined position (Page 7)*

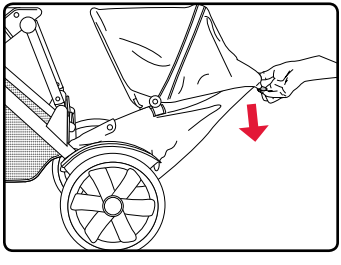

Britax

B-READY™

Lower Infant Car Seat (LICS) Adapter

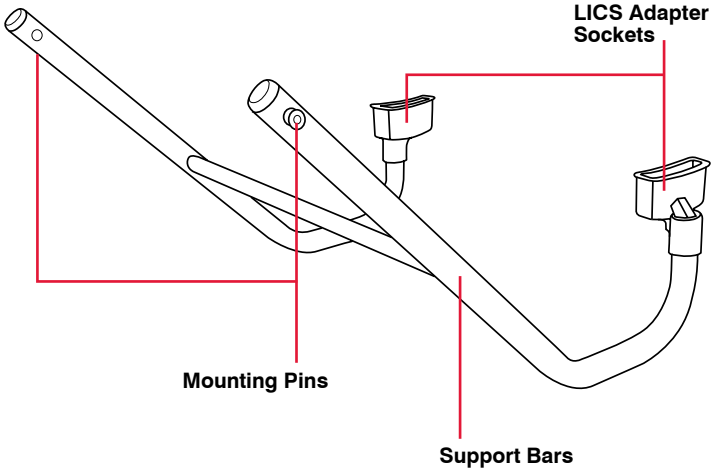

- Actual product may vary from images.

Attaching the LICS Adapter

NOTE: *Storage pouch must be removed before attaching LICS Adapter*

- Line up the support bars on the LICS Adapter with the mounting brackets on the inside of the frame

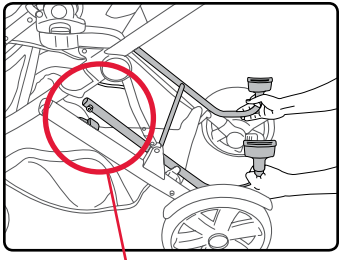

- Slide the mounting pins into mounting bracket on the stroller

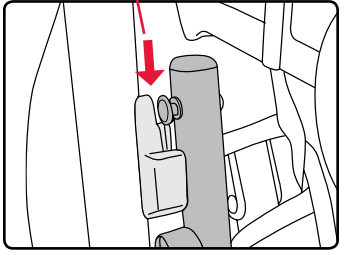

- Press down to engage the accessory frame lock

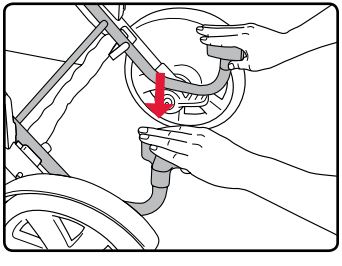

Attaching Infant Car Seat to LICS Adapter

- Line up the locking latches with the LICS sockets and press down until they lock into place

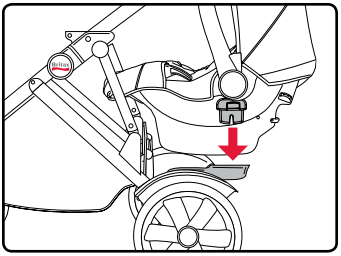

Removing the LICS Adapter

- Press the left button on the rear frame and then press and hold the right release button while lifting upward on the LICS Adapter

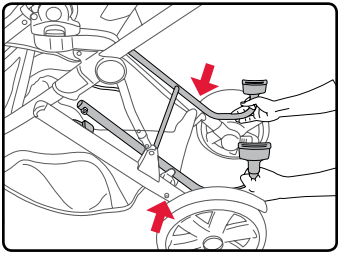

- Slide the mounting pins out of the mounting brackets and lift the LICS Adapter away from stroller

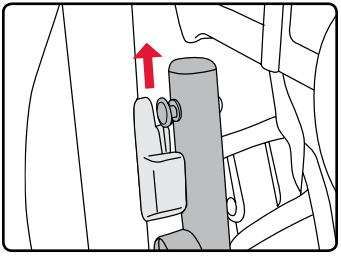

Dual Infant Car Seats

- Attach the extension adapters to the frame by lining up the locking latches with the chassis locks and pressing down until they lock into place

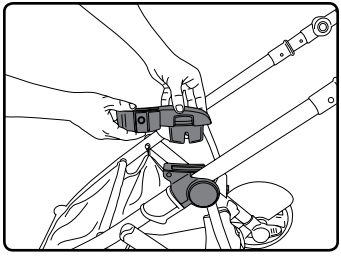

- Attach the fabric guard by connecting the zippers around each side of the frame and securing the elastic bands around the frame hinge bolt

IMPORTANT: *The fabric guard should always be used with an infant car seat on top to protect the child in the lower position from possible finger entrapment*

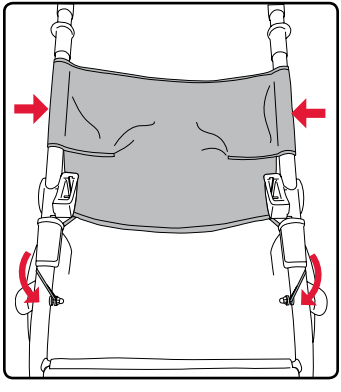

- Attach top infant car seat by lining up the locking latches with the adapter sockets and pressing down until they lock into place

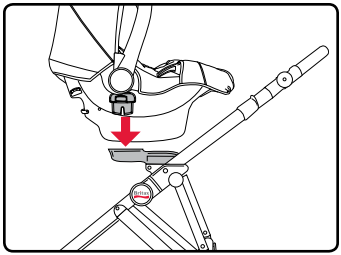

- Attach the lower infant car seat by lining up the locking latches with the LICS sockets and press down until they lock into place

IMPORTANT: *Top and lower infant car seats can be either forward or rear facing*

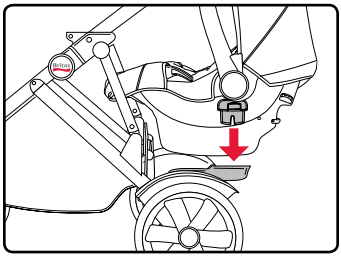

Important Reminders

- DO NOT use extension adapters with the top seat. They are only for use with the bassinet or infant car seat.
- The infant car seat in the lower position must always be removed first prior to child or infant car seat in the top position
- The fabric guard should always be used with an infant car seat on top to protect the child in the lower seat from possible finger entrapment

B-READY™ Stroller Configurations

- *Shown with optional accessories (sold separately)*

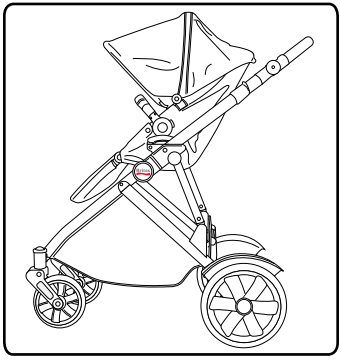

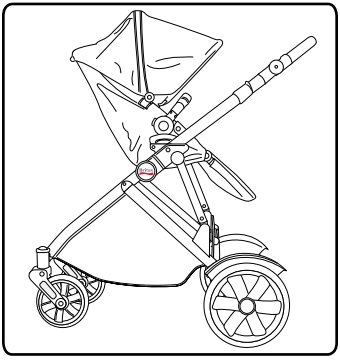

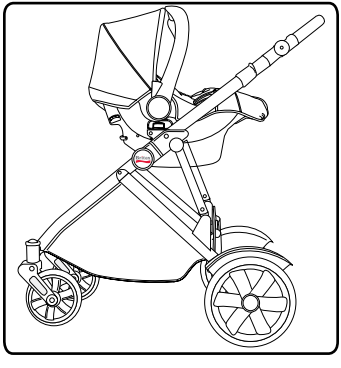

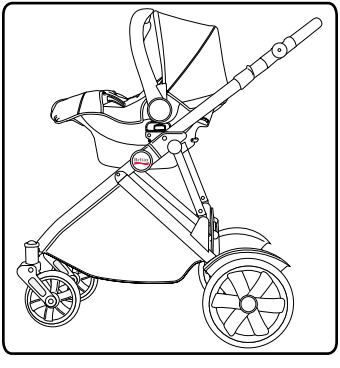

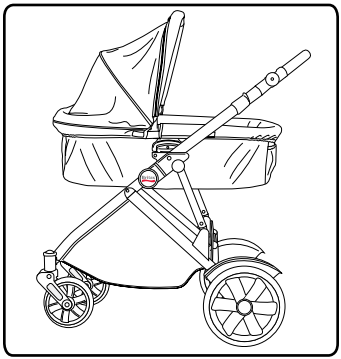

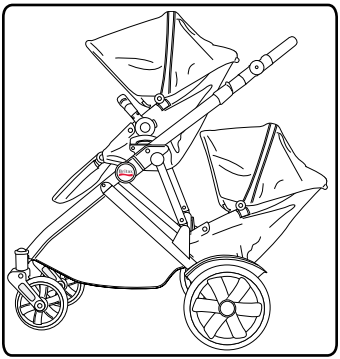

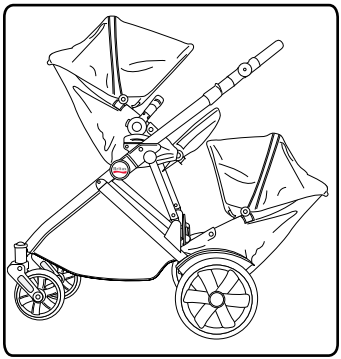

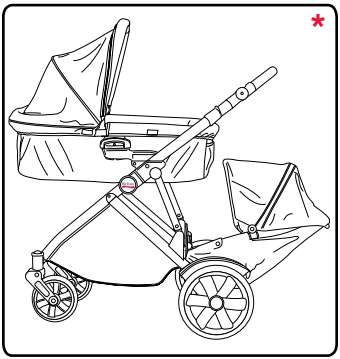

* *Extension adapters MUST be used in this configuration*

- *Shown with optional accessories (sold separately)*

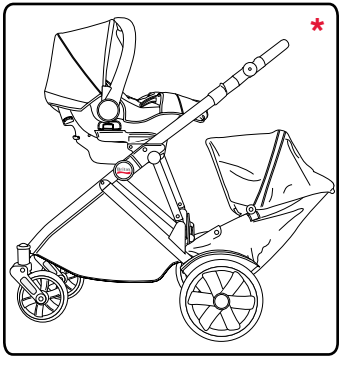

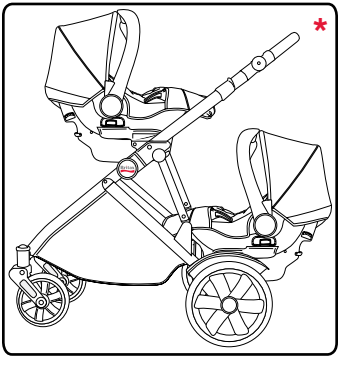

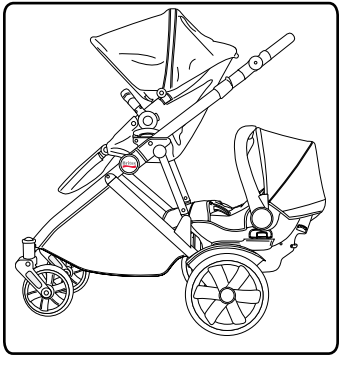

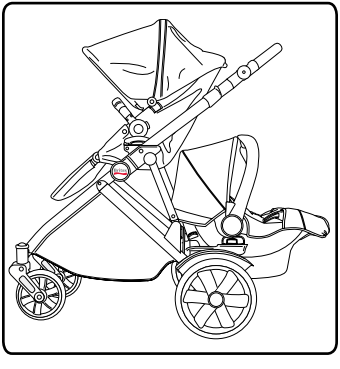

* *Extension adapters MUST be used in this configuration*

Frame

• Wipe the frame with a damp cloth and mild soap. Use clean, dry cloth or towel to wipe away excess water and soap.

Fabric

• Do not machine wash or dry. Do not iron.

• Hand wash with cold water and mild soap. Air dry to prevent the cover from shrinking.

Cleaning Plastic Parts:

• Wipe with a damp cloth and mild soap. Use clean, dry cloth or towel to wipe away excess water and soap.

Plastic Parts

• Do not use abrasives, solvents, strong detergents, or household cleaners. These products can scratch, discolor, and weaken plastic or cause corrosion on metal surfaces.

Storage

• Store away from extreme heat to prevent damage to plastic parts.

• Cover stroller to prevent dust build-up and exposure to sunlight.

• Do not stack other items on top of stroller.

Warranty

This product is distributed by Britax Child Safety, Inc. Britax Child Safety, Inc. ("Britax") warrants this product to the original retail purchaser as follows:

Limited Two-Year Warranty

This product is warranted against defective materials or workmanship for two years from the date of original purchase. Proof of purchase is required. Your exclusive remedy for this warranty is that Britax will, at its option, provide repair or replacement components to the original purchaser for this product or replace the product. Britax reserves the right to discontinue or change fabrics, parts, models or products, or to make substitutions. Labor and shipping costs for returns are not included.

To make a claim under this Warranty, you must contact Britax Customer Services Department at 1-888-4BRITAX or write to 13501 South Ridge Drive, Charlotte, NC 28273. Proof of purchase is required.

PLEASE COMPLETE AND MAIL THE REGISTRATION CARD WITHIN 30 DAYS OF PURCHASE, OR VISIT WWW.BRITAXUSA.COM/REGISTRATION.

Warranty Limitations

This warranty does not include damages which arise from negligence, misuse, salt corrosion, or use not in accordance with the user guide.

The use of non-Britax Child Safety, Inc. accessories is not approved by Britax. The use of unapproved accessories could cause this product to become damaged or dangerous. Their use automatically voids the Britax warranty.

Limitations of Damages

The warranty and remedies as set forth above are exclusive and in lieu of all others, oral or written, express or implied. In no event will Britax or the retailer selling this product be liable for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitations of Warranties and Other Warranty Terms and State Law Rights

Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither Britax, nor the retailer selling this product, authorizes any person to create for it any other warranty, obligation, or liability in connection with this product.

Notes

Visit our website at www.Britax.com for more information.

Britax Child Safety, Inc.
13501 South Ridge Drive
Charlotte, NC 28273
USA

A **Britax Childcare Group Limited** company

Tel. : 1-888-427-4829

www.Britax.com